


BMGI255SS


25 Litre Built-in

microwave oven with grill

INSTRUCTION MANUAL

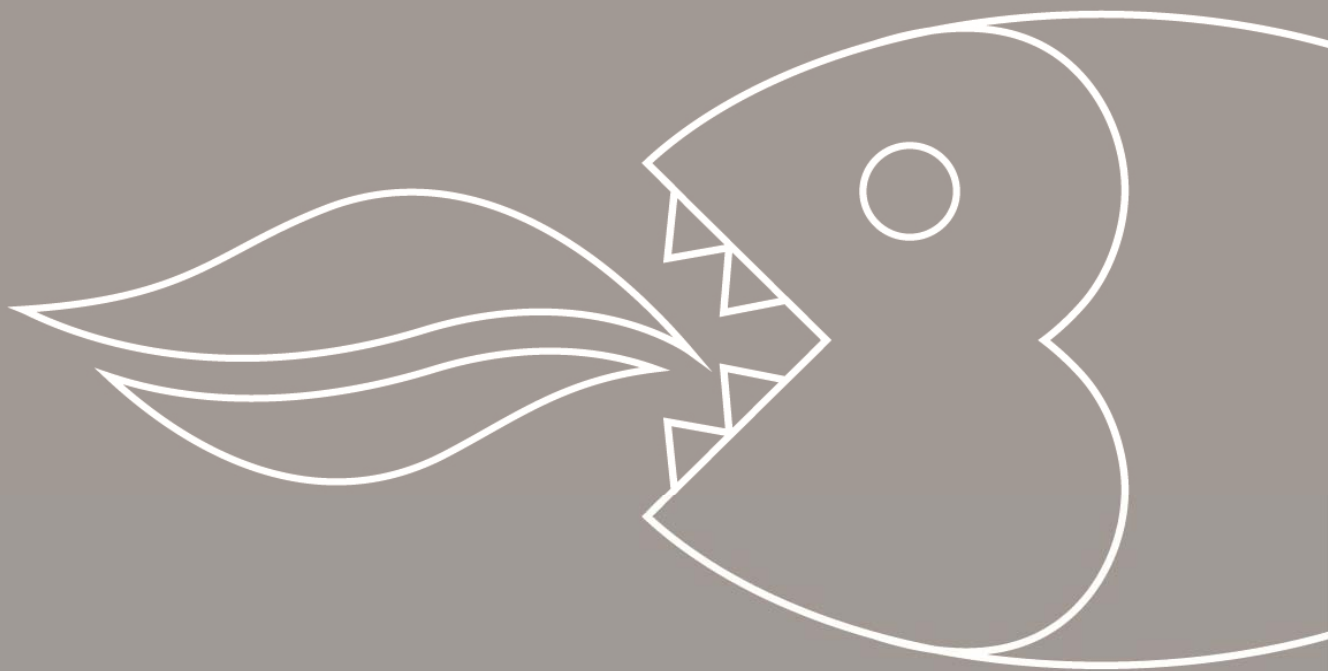

Owner's Manual

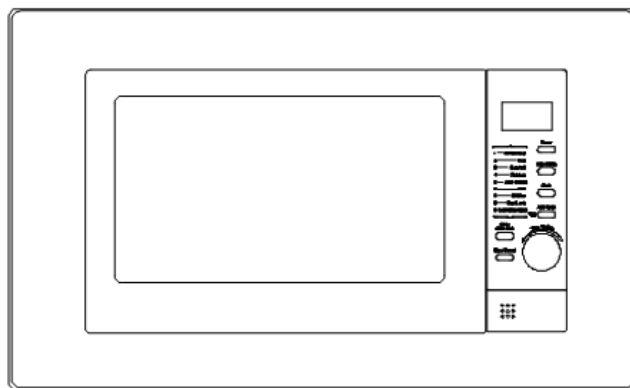

MODEL: BMGI255SS

CONTENTS

CONTENTS2

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY3

SPECIFICATIONS.....3

IMPORTANT SAFETY INSTRUCTIONS3

INSTALLATION5

RADIO INTERFERENCE5

GROUNDING INSTRUCTIONS.....5

MICROWAVE COOKING PRINCIPLES3

BEFORE YOU CALL FOR SERVICE3

UTENSILS GUIDE6

PART NAMES8

CONTROL PANEL9

HOW TO SET THE OVEN CONTROLS.....10

SETTING DIGITAL CLOCK10

 QUICK START 10

 MICROWAVE COOKING 10

 GRILL/COMB. 11

 AUTO COOK..... 11

 AUTO DEFROST 12

 CHILD LOCK 12

CLEANING AND CARE13

INSTALLATION INSTRUCTIONS.....14

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to adjust or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow dirt or cleaner residue to accumulate in the door seal.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
 - 1) Door (bent),
 - 2) Hinges and latches (broken or loosened),
 - 3) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

| | |
|-------------------------------|----------------------------|
| Power Supply | 230-240V/50Hz |
| Power Consumption (Microwave) | 1400W |
| Power Consumption (Grill) | 1000W |
| Rated Microwave Power Output | 900W |
| Operation Frequency | 2450MHz |
| Outside Dimensions | 390mm(H)×595mm(W)×391mm(D) |
| Oven Cavity Dimensions | 220mm(H)×340mm(W)×344mm(D) |
| Oven Capacity | 25Litres |
| Cooking Uniformity | Turntable System |
| Net Weight | Approx. 14.5kg |

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING: To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard

5. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. **Warning:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
7. To reduce the risk of fire in the oven cavity:
 - a. When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition;
 - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - c. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
8. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverages can result in delayed eruptive boiling; therefore care has to be taken when handling the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The lighting of this appliance is not suitable for room illumination.

INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the cavity.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity is generated, or near combustible materials.
5. Do not operate the oven without the glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so that it can be easily unplugged in an emergency.
8. Do not use the oven outdoors.

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and door seal of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are coloured in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwaving to increase the speed of cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the centre of the dish to the outside.

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT THE CUSTOMER CARE DEPARTMENT. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.


UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave energy, it allows the energy to pass through the container and heat the food.
2. Microwave energy cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminium foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity

The list below is a general guide to help you select the correct utensils.


| Cookware | Microwave | Grill | Combination |
|---------------------------------|-----------|-------|-------------|
| Heat-Resistant Glass | Yes | Yes | Yes |
| Non Heat-Resistant Glass | No | No | No |
| Heat-Resistant Ceramics | Yes | Yes | Yes |
| Microwave-Safe Plastic Dish | Yes | No | No |
| Kitchen Paper | Yes | No | No |
| Metal Tray | No | Yes | No |
| Metal Rack | No | Yes | No |
| Aluminium Foil & Foil Container | No | Yes | No |

PART NAMES

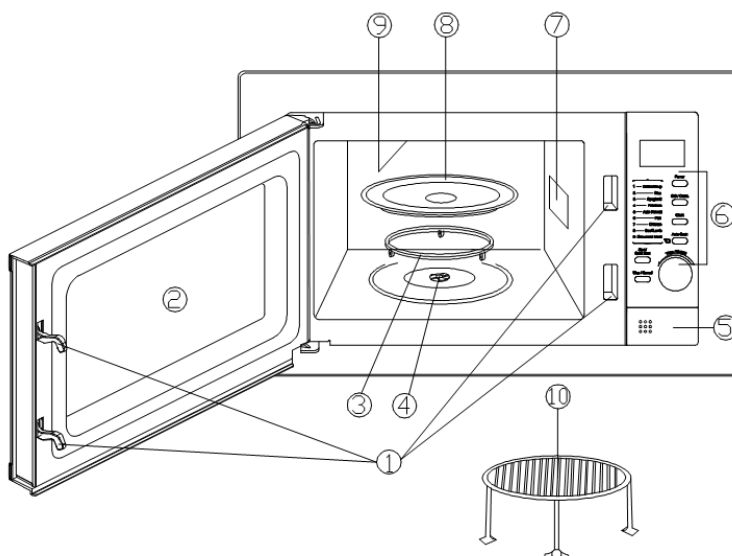

1. Door Safety Lock System
2. Oven Window
3. Roller Ring
4. Shaft
5. Door Release Button
6. Control Panel
7. Wave Guide (Please do not remove the mica plate covering the wave guide)
8. Glass Tray (turn-table)
9. Grill Heater
10. Metal Rack

CONTROL PANEL

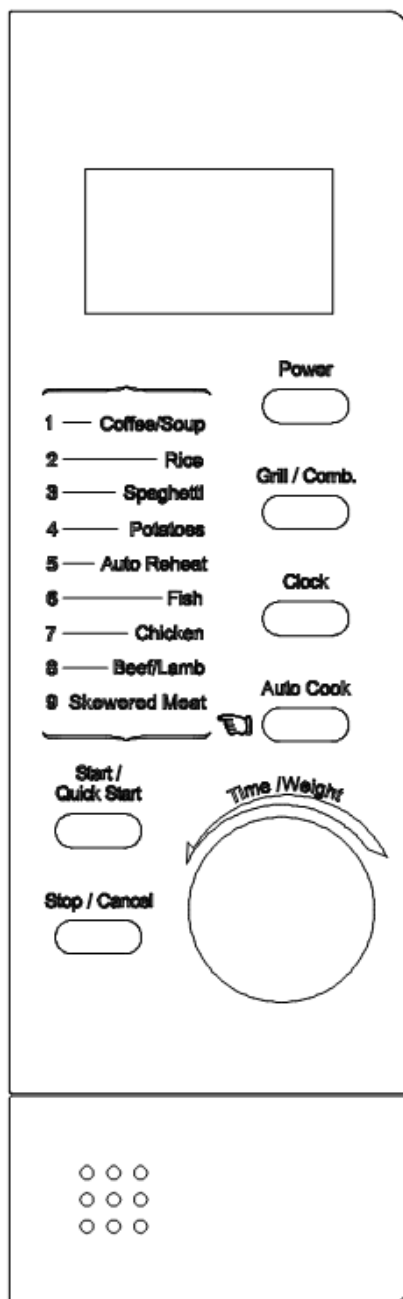

Display Screen

Cooking time, power, indicators and present time are displayed.

Power

Press to select microwave Power.

Grill / Combi.

Press to set a grill cooking program.

Press to select one of two combination cooking settings.

Clock

Press to set the clock or to set the kitchen timer.

Auto Cook

Press to select an auto-menu option.

Time/Menu

Rotate to set cooking time or set the weight.

Start/Quick Start

Press to start a selected cooking program or to start the 'Quick Start' cooking program.

Stop/Cancel

Press to stop a cooking program and/or clear all selected settings.

HOW TO SET THE OVEN CONTROLS

Setting digital clock

With the oven ready for input, touch the CLOCK button once or twice to set the digital clock in 12 or 24 hours cycle.

FOR EXAMPLE: Suppose you want to set the oven clock time to 8:30.

1. Press CLOCK button once or twice (12/24 hour clock)
2. Turn TIME/WEIGHT to indicate the hour digit 8.
3. Press CLOCK button.
4. Turn TIME/WEIGHT dial to indicate the minute digits (30) until the screen shows 8: 30.
5. Press CLOCK to confirm the setting.

NOTE: To check clock time during cooking, press the CLOCK button once, the time will be displayed.

QUICK START

This feature allows you to start microwave cooking instantly.

Press the START/QUICK START button and the microwave starts working at full power level immediately. Press the START/QUICK START button a number of times to increase the cooking time. The longest cooking time is 10 minutes.

MICROWAVE COOKING

To cook with microwave power alone, press the POWER button to select a cooking power level, and then use the TIME/WEIGHT dial to set a desired cooking time. The longest cooking time is 95 minutes.

Select power level by pressing the POWER button:

| PRESS POWER BUTTON | COOKING POWER |
|--------------------|---------------|
| Once | 100% |
| Twice | 80% |
| 3 times | 60% |
| 4 times | 40% |
| 5 times | 20% |
| 6 times | 0% |

For example, suppose you want to cook for 1 minute at 60% of microwave power.

6. Press POWER button 3 times.
7. Turn TIME/WEIGHT to 1:00.
8. Press START/QUICK START button.

GRILL/COMB.

Grill/comb cooking has three cooking modes: grill, combination 1, and combination 2. You can press the Grill/comb button to select one. The longest cooking time is 95 minutes.

- GRILL: 100% grilling function
- Combination 1 (COMB1) : 30% of the time microwave cooking, 70% grill cooking.
- Combination 2 (COMB2) : 55% of the time microwave cooking, 45% grill cooking.

FOR EXAMPLE: Suppose you want to set combination 1 cooking for 25 minutes.

1. Press the GRILL/COMB button twice.
2. Turn TIME/WEIGHT to 25:00.
3. Press START/QUICK START button.

AUTO COOK

For food for the following cooking mode, it is not necessary to program the time and the cooking power. It is sufficient to indicate the type of food that you want to cook as well as the weight of the food. In order to do this, press the AUTO COOK button to select a category of food/cooking mode. Then turn the TIME/WEIGHT dial to indicate weight of food to be cooked. The oven begins cooking once the START/QUICK START button is engaged.

For some programmes, in the middle of the cooking time the cooking programme pauses and beeps, to remind you to open the door and check its doneness and turn the food over. Be careful when handling the food from the oven as it could be very hot and potentially scold! To resume cooking, just close the door, and press START/QUICK START the oven will cook for the remaining time.

For example: to cook 400g of fish.

1. Press the AUTO COOK button 6 times.
2. Turn TIME/WEIGHT dial to indicate a weight of 400g.
3. Press START/QUICK START button.

Auto Cook Menu

| Code | Food/cooking mode | |
|------|-------------------------|---|
| 01 | Coffee/Soup (200ml/cup) | <ol style="list-style-type: none">1. For Coffee/Soup and Potato, it's the number of servings, not the weight that it calculates (as indicated).2. The result of Auto Cook depends on factors such as the shape and size of food, your personal preference, and even how well you happen to place food in the oven. <p>*For Rice and Spaghetti, add boiling water before cooking.</p> |
| 02 | Rice (g)* | |
| 03 | Spaghetti (g)* | |
| 04 | Potatoes (each 230g) | |
| 05 | Auto Reheat (g) | |
| 06 | Fish (g) | |
| 07 | Chicken (g) | |
| 08 | Beef/Lamb (g) | |
| 09 | Skewered Meat (g) | |

AUTO DEFROST

The oven can defrost meat, poultry, and seafood. The time and the defrosting power are adjusted automatically once the weight is programmed.

FOR EXAMPLE: Suppose you want to defrost some shrimp.

1. Place the shrimp to be defrosted into the oven.
2. Rotate TIME/WEIGHT dial anticlockwise to choose weight (100g~1800g).
3. Press START/QUICK START button.

NOTE: During the defrosting programme, the system will pause and sound beeps to remind user to turn the food over. Press START/QUICK START to resume the defrosting once you have done so.

CHILD LOCK

Use to prevent unsupervised operation of the oven by little children. The CHILD LOCK indicator will show up on display screen, and the oven can not be operated while the CHILD LOCK is set.

To set the CHILD LOCK: Press and hold the STOP/CANCEL button for 3 seconds, a beep sounds and lock indicator lights.


To cancel the CHILD LOCK: Press and hold the STOP/CANCEL button for 3 seconds until lock indicator on display goes off.

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the both sides of the door and window, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. This is normal.
7. It is occasionally necessary to remove the glass tray (turn-table) for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odours from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult Customer Care.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
12. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odour generated by burning the lubricating oil. This phenomenon will disappear after a period of using.
- 13. The packaging materials that we use are environmentally friendly and can be recycled.**
- 14. Please do not dispose this appliance in the domestic rubbish bin. It should be disposed to the particular disposal centre provided by the local waste authority. Disposal must be carried out in accordance with local environmental regulations for waste disposal.**




Built-in installation instructions:

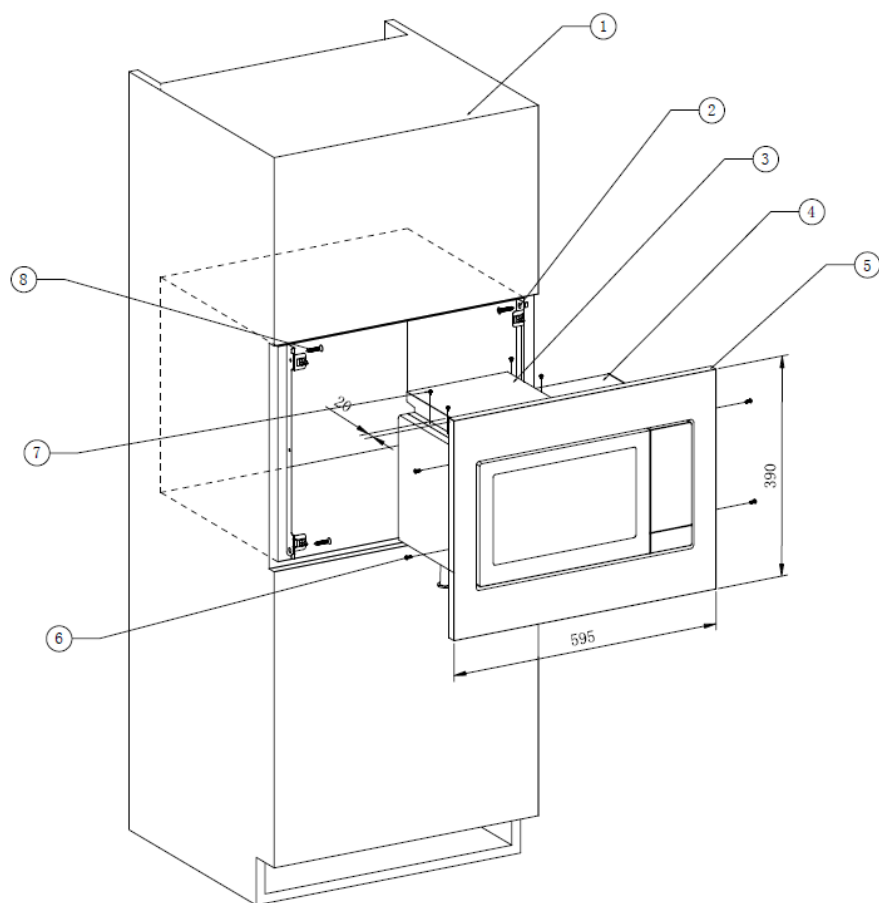


1. Cabinet
2. Frame fastener (x2)
3. Heat channel
4. Microwave oven
5. Frame kit
6. Screw 4x10 (x4)
7. Screw 4x8 (x4)
8. Screw 4x16 (x4)


Make a cut out in the cabinet as per the below dimensions:

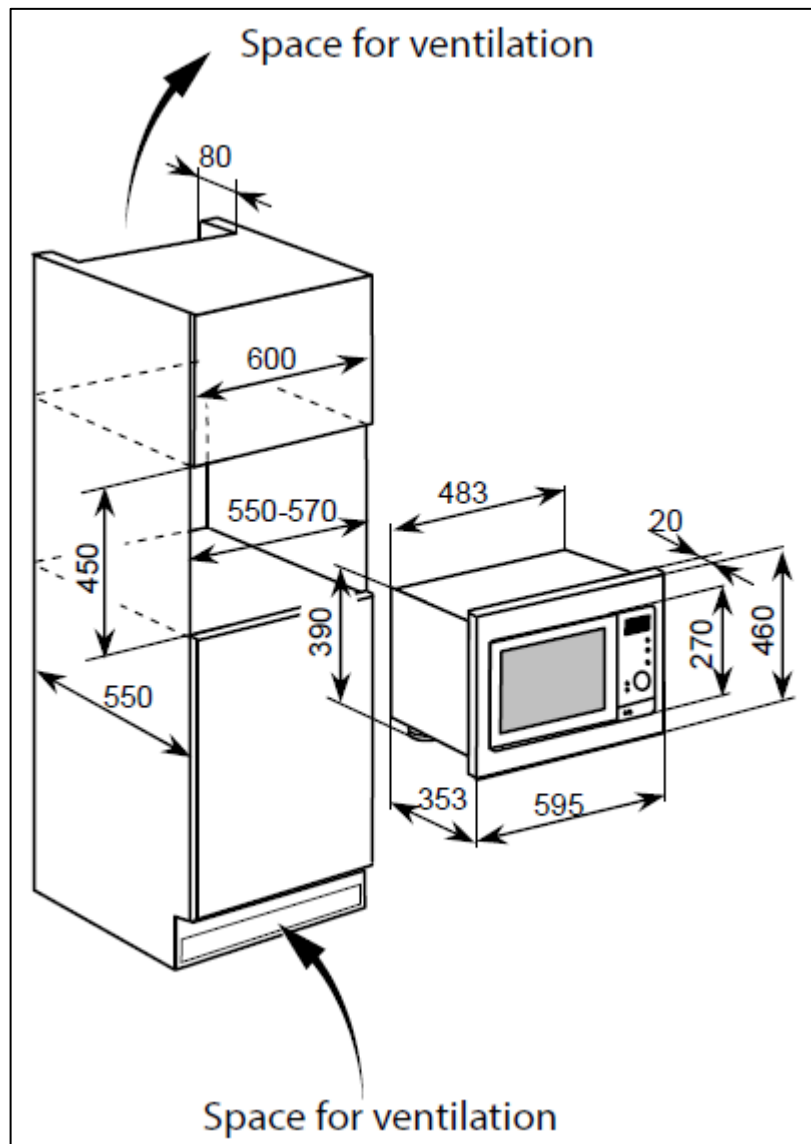


Turn the oven over and place on a cushioned surface. Then attach the feet

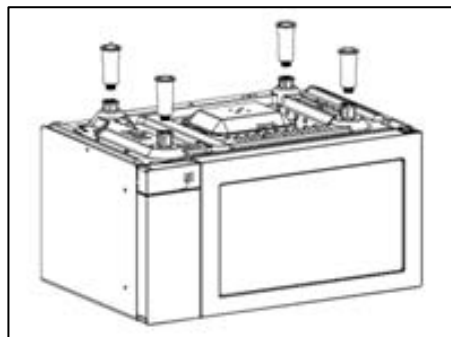


Fasten the heat channel to the top of the microwave using the 4 screws (4x8).

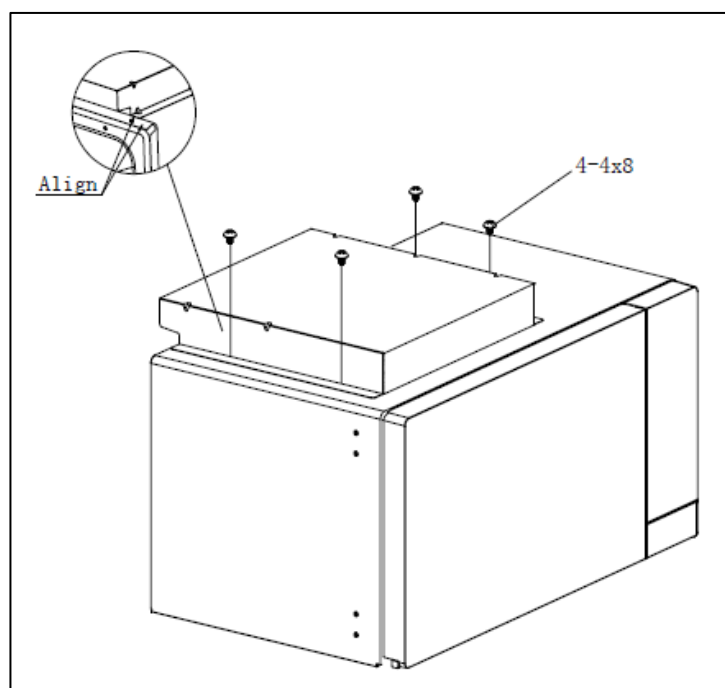


Fasten the frame kit to the front of the microwave using the screws provided (4x10):

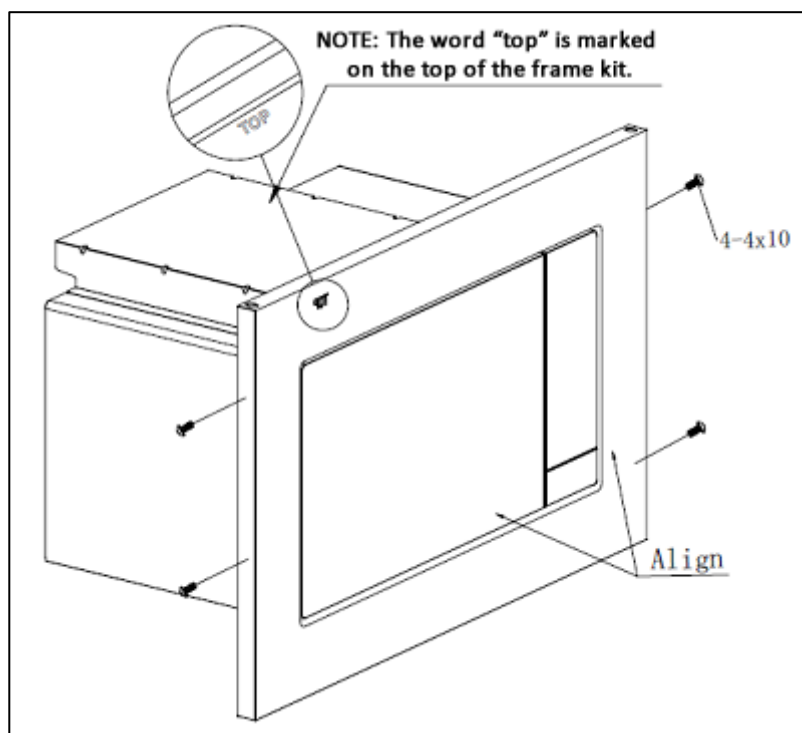

Attach the 2 frame fasteners to the cabinet using the screws provided (4 x 4x16)

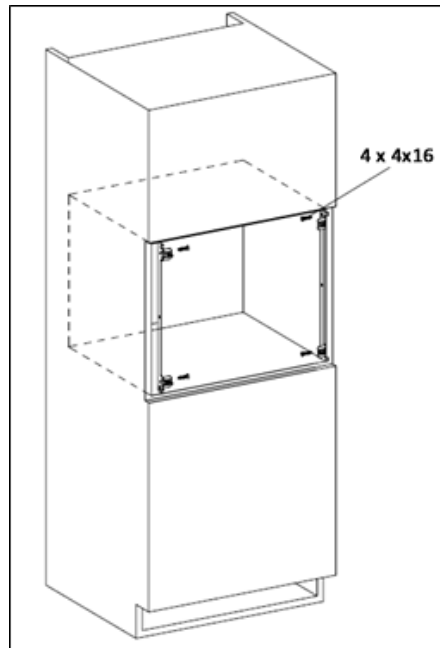


Install the microwave into the aperture, ensuring the clips on the frame kit secure to the frame fasteners.


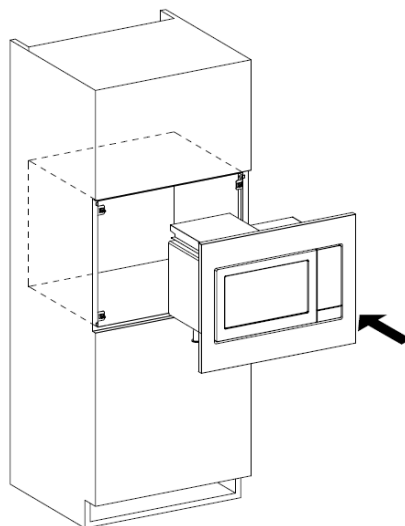


You can adjust the feet to aid in alignment.

Ensure that the oven is central

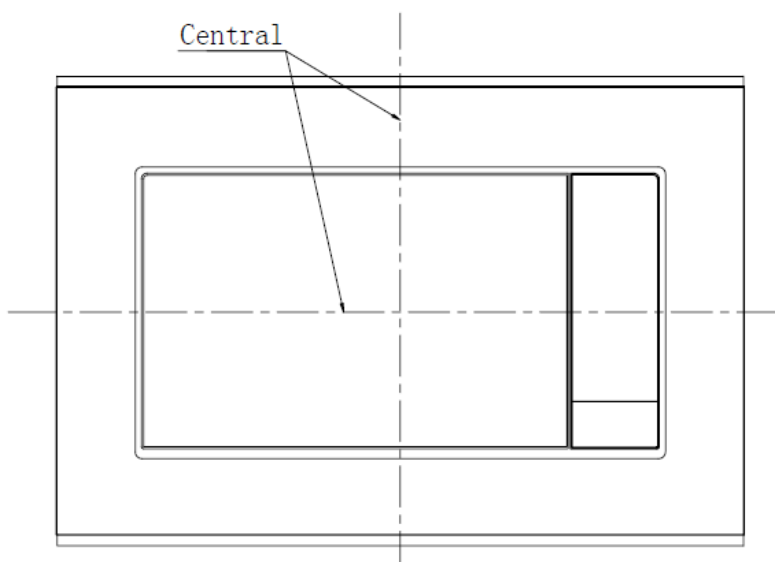

Installation complete.

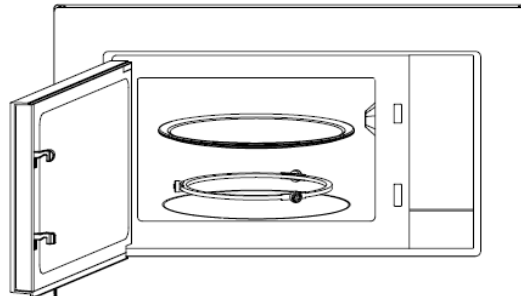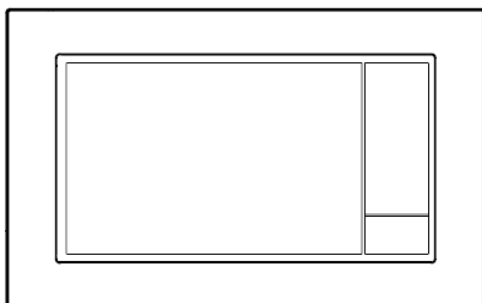



IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact the Customer Care Department.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then they will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by the manufacturer has been completed.

IMPORTANT: The manufacturer operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.



United Kingdom

Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone

(0118) 933 6900

Sales Fax

(0118) 931 0035

Customer Care Telephone

(0118) 933 6911

Customer Care Fax

(0118) 986 9124

Spares Telephone

(01235) 437244

Advice Line Telephone

(0118) 933 6933

E-mail:

sales@baumatic.co.uk
customercare@baumatic.co.uk
spares@baumatic.co.uk
technical@baumatic.co.uk

Website:

www.baumatic.co.uk

Facebook:

www.facebook.com/baumatic.uk

Republic of Ireland

Service Telephone

1-890 812 724

Spares Telephone

091 756 771

Czech Republic/Slovakia

Baumatic s.r.o.

Lípová 665/1
460 01 Liberec 4
Czech Republic

Panenská 34
811 03 Bratislava - Staré Mesto
Slovakia

+420 483 577 200 (CZ)

+421 255 640 618 (SK)

www.baumatic.cz

www.baumatic.sk

Germany

Kundendienst & Ersatzteile
Deutschland 0049(0)180-5888975
Oesterreich +43 (0) 820 / 420423
www.baumatic.de

Italy

Baumatic Italia S.R.L.
Via Galvani N.3
35011 Campodarsego (PD)

+3904 9920 2297
www.baumatic.it

Holland

Baumatic Benelux B.V.
Dukdalfweg 15d
1332 BH ALMERE
Nederland

+31(0)36 549 1553/1555
www.baumatic.nl

